



PH: 09 913 3110 FAX: 09 913 3113
5 Smales Road East Tamaki, Manukau
P.O. Box 58031 Botany 2163
www.henrybrooks.co.nz

AUCKLAND // WELLINGTON // CHRISTCHURCH

Bath Installation Instructions


**READ FULLY AND FOLLOW INSTRUCTIONS
INCORRECT INSTALLATION MAY VOID YOUR WARRANTY
IT IS THE RESPONSIBILITY OF THE INSTALLER TO FOLLOW LOCAL COUNCIL
REGULATIONS**

Before installing check the bath for any transportation damage, or fault caused in transportation. At the completion of installation again check the bath for damage during installation.

Prior to installation remove the protective film from waste area, bath edge, and fitting areas of accessories (if required).

Before installation confirm all supply and waste pipework, including mixer and trap are installed


The bath must be fully supported under the complete underside of the rim as shown in the image below.

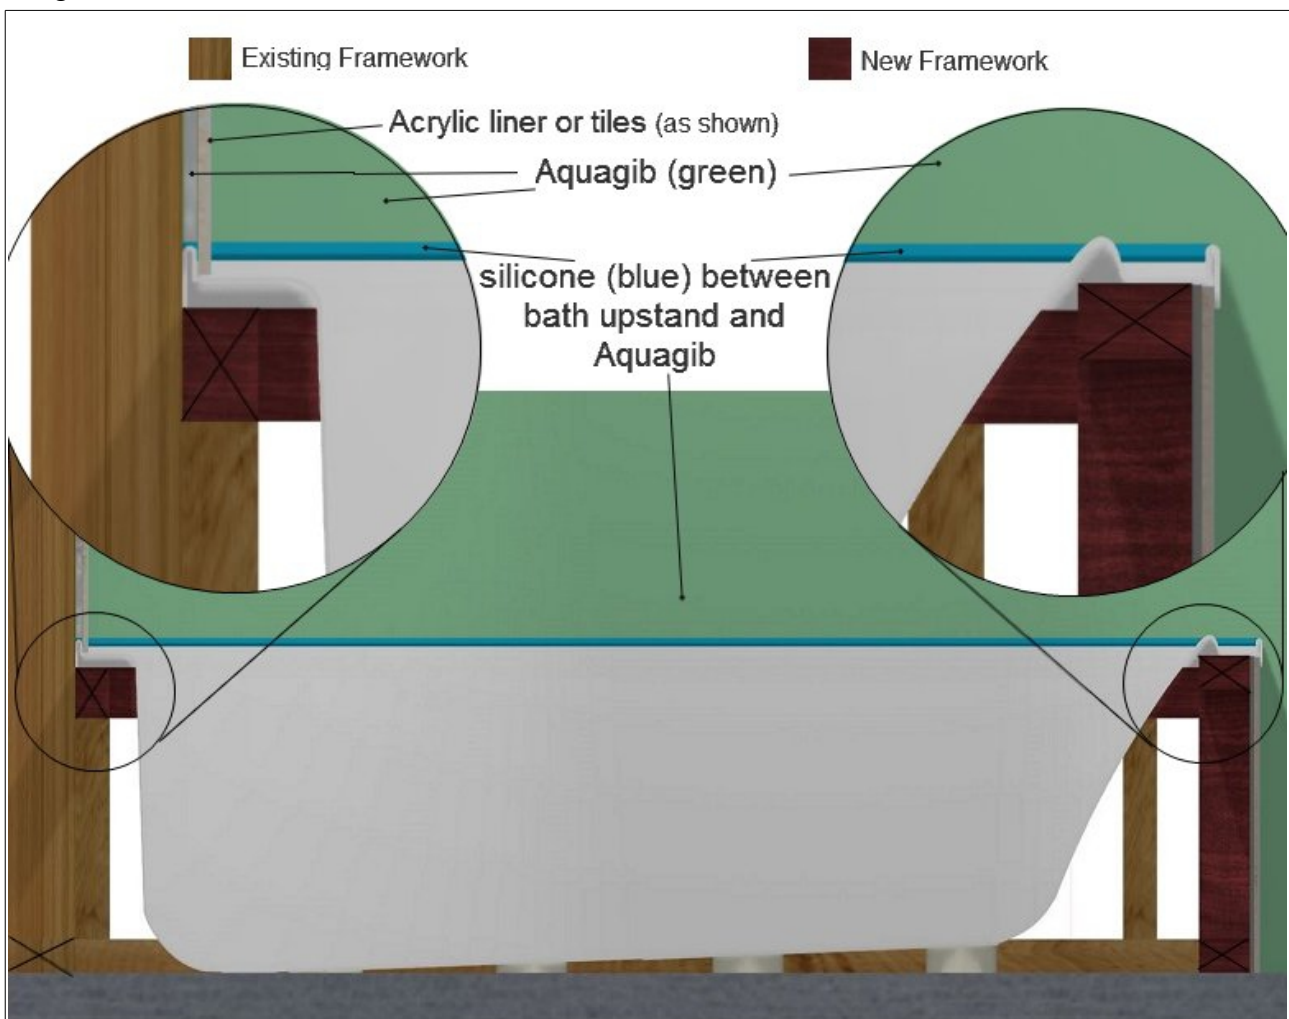

The Bath must not float from the rim support.

If the bath model does not have support feet (low cost model) the installer must support the bath base after the bath is correctly suspended around the rim. The base must be supported by blocks as shown in the image below, ensure the supports are fully across the bath base and glued into position with a generous quantity of 'Nail Bond'.

If the bath has PVC support feet a commercial adhesive such as 'Nail Bond' must be used to adhere the feet to the floor.

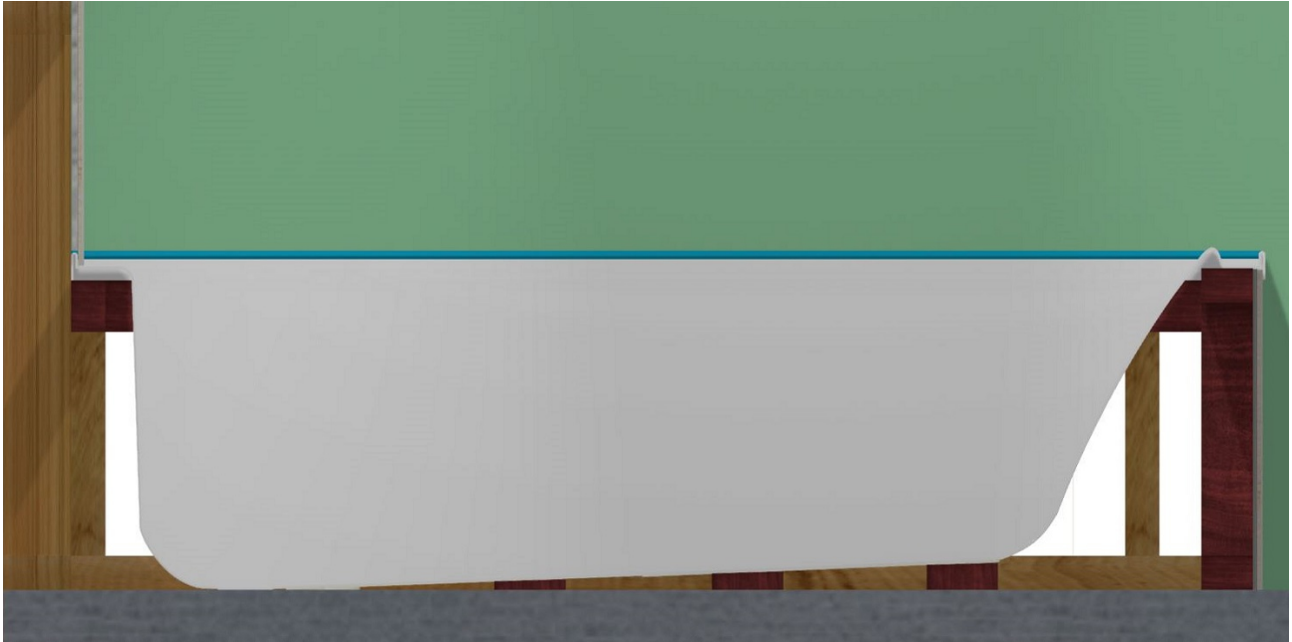

RECOMMENDED BATH INSTALLATION

IMPORTANT NOTICE

- The bath frame must be installed level on all top edges. The rim and bath base must be fully supported, or warranty may be void.
- Ensure the bath base is supported by the methods shown in image above.

METHOD

Ensure the floor is flat and level.

The base of the bath must be fully supported.

Install a level frame at the height you have determined.

DO NOT allow the bath to hang only from the rim.

It is recommended that the wall lining, acrylic or tiles be bought down to the inside base of the up stand to do this the bath may need to be checked into the wall studs.

Ensure the bath frame is completely level when making and test fitting prior to finally fitting the bath in place.

Tools Required



Silicone
We recommend
Sika Silaflex



Liner Glue
We recommend
Sika Shower bond




Bath Locating Glue
We recommend
Sika Nail bond



Silicone
Gun



Level

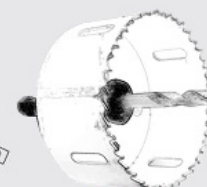

Hole Saw



Drill bits
sizes as required

DRILLING AND CUTTING ACRYLIC IF REQUIRED

Small holes can be drilled with a twist drill, but back off the cutting edge of the drill.

(the sharp cutting edge must be dulled)

Large holes must be drilled with a hole saw.

Always drill from the visible surface.

If any part of the acrylic surface needs a straight cut for some reason use a fine hack saw blade.

FITTING THE WALL LINING (where used)

1/ The wall lining must suit the bath you have purchased.

2/ Fit the lining into position without any adhesive making sure it sits simply against the Gib wall and evenly onto the bath at the base of the up stand. (The Gib backing must be original, no paint or plaster)

3/ Once satisfied the wall liner is correctly and fully set into position run a pencil line around the perimeter of the lining.

4/ Using the pencil line measure the position of any fittings requiring holes to be made in the lining. Transfer these positions to the lining and correctly make the holes in the lining.

5/ Check the lining onto the wall again to ensure everything is positioned correctly.

6/ Use the correct lining adhesive supplied to run beads of adhesive in the following pattern. Approximately 10mm in from the pencil line run a bead of adhesive. Continue to infill with adhesive at about 100mm centers till the complete area is in-filled correctly.

7/ Make a silicon bead within the 10mm markings to give a water tight seal when the lining is put into place.

8/ Fit the wall liner into place and smooth out with a clean rag.

9/ Fill around the top and ends of the liner with a paintable sealer.

10/ Clean up any excess silicon.

11/ remove protective film from the liner and fit fittings.

The acrylic bath should be wiped off with a soft cloth or squeegee after each time the bath is used.

Rinse and use only a soft cloth or squeegee on the bath surface.

Never use petroleum. Ammonia, bleach, acid or lemon based cleaners on any part of the bath.

Never use abrasive cleansers, metal brushes or scrapers, that could scratch or dull the surface of the acrylic surface.



PH: 09 913 3110 FAX: 09 913 3113
5 Smales Road East Tamaki, Manukau
P.O. Box 58031 Botany 2163

AUCKLAND // WELLINGTON //
CHRISTCHURCH

We trust you will enjoy your new Acrylic Bath from
www.henrybrooks.co.nz